




Qixiang Electron Science & Technology Co., Ltd.
www.anytone.net

AnyTone®

AT-D168

**Digital DMR and Analog
VHF/UHF Two Way Radio**

Operating Manual

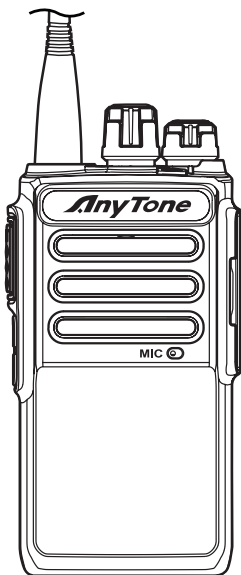

DMR
DIGITAL MOBILE RADIO ASSOCIATION

THANK YOU!

Thank you very much for choosing our Digital DMR and Analog two way radio.

This radio adopts the latest advances in technology, providing reliable communication in today's demanding communication environment.

This radio offers both DMR digital and analog communication, introduces innovative DMR digital processing system to achieve high-audio quality and digital encryption. It offers great stability, and reliability, together with long distance communication as well as fashionable design and compact exterior lines. AT-D168 has AES256 and ARC4 digital Encryption, Emergency Alarm, Work Alone, Analog DTMF, 2TONE, 5TONE, CTCSS/DCS encode/decode functions.



- » **When programming the radio, start by reading the factory software data, and then rewrite this data with your frequency etc., to a new saved code plug, otherwise errors may occur.**
- » **You can use the programming cable with a PC to program the frequency, channel type, power etc. your programming must comply with your FCC (or other country) license certification.**
- » **25 kHz channels not available in the US.**
- » **Availability is subject to individual country law and regulations.**
- » **All specifications shown are guaranteed unless otherwise stated and are subject to change without notice.**
- » **Specifications are for unit excluding options, unless otherwise stated.**

CONTENTS

1.UNPACKING AND CHECKING THE EQUIPMENT.....	1
1.1 Supplied Accessories.....	1
1.2 Standard Accessories	2
1.3 Optional Accessories	2
2.BATTERY INFORMATION.....	3
2.1 Charging the Battery Pack.....	3
2.2 Charger Supplied	3
2.3 Use Caution with the Li-ion Battery.....	3
2.4 How to Charge	4
2.5 How to Store the Battery.....	5
3. PREPARATION.....	6
3.1 Installing / Removing the Battery	6
3.2 Installing / Removing the Antenna	6
3.3 Installing / Removing the Belt Clip	7
3.4 Installing the Additional Speaker/Microphone (Optional)	7
4. RADIO OVERVIEW.....	8
4.1 Status Indications.....	8
5.BASIC OPERATIONS.....	9
5.1 Power on the Radio	9
5.2 Adjust Volume	9
5.3 Select a Zone.....	9
5.4 Select a Channel.....	9
5.5 Receiving and Responding to a Radio Call	9
5.6 Making a Call	9
5.7 Monitor	9
5.8 Battery Voltage Test.....	10
6. PROGRAMMABLE FUNCTIONS.....	11
7.RESET.....	13
8.TROUBLE SHOOTING GUIDE.....	14

9.ON-LINE SERVICE AND SUPPORT	15
SAFETY	16
10.TECHNICAL SPECIFICATIONS	18

1. UNPACKING AND CHECKING THE EQUIPMENT

Unpack the radio carefully. We recommend that you identify the items listed in the following table before discarding the packing materials. If any items are missing or have been damaged during shipment, please contact the carrier or the dealers immediately.

1.1 Supplied Accessories

Item	Number	Quantity
Antenna		1
Li-ion Battery Pack		1
Battery Charger		1
AC Adaptor		1
Belt Clip		1
Instruction Manual		1

1. UNPACKING AND CHECKING THE EQUIPMENT

1.2 Standard Accessories



Antenna*1




Li-ion Battery Pack
(1800mAh)



Charger



AC Adaptor



TYPE C cable



Belt Clip



Instruction Manual

1.3 Optional Accessories



Earphone




Li-ion Battery Pack
(2600mAh)



Wrist strap



10cm Antenna



40cm Antenna

2. BATTERY INFORMATION

2.1 Charging the Battery Pack

The Li-ion battery pack is not charged at the factory; please charge it before use.

Charging the battery pack for the first time after purchase or extended storage (more than 2 months) may not bring the battery pack to its normal maximum operating capacity. Best operation will require fully charging/ discharging the battery two or three times before the operating capacity will reach its best performance. The battery pack life may be depleted when its operating time decreases even though it has been fully and correctly charged. If this is the case, replace the battery pack.

2.2 Charger Supplied

Please use the specified charger provided by our company. Other models may cause explosion and personal injury. After installing the battery pack, and if the radio displays low battery with a red flashing lamp or voice prompt, please charge the battery.

2.3 Use Caution with the Li-ion Battery

- a.** Do not short the battery terminals or throw the battery into a fire. Never attempt to remove the casing from the battery pack, as we cannot be held responsible for any accident caused by modifying the battery.
- b.** The ambient temperature should be between 5°C-40°C (40°F - 105°F) while charging the battery. Charging outside this range may not fully charge the battery.
- c.** Please turn off the radio before inserting it into the charger. It may otherwise interfere with correct charging.
- d.** To avoid interfering with the charging cycle, please do not cut off the power or remove the battery during charging until the green light is on.
- e.** Do not recharge the battery pack if it is fully charged. This may shorten the life of the battery pack or damage the battery pack.
- f.** Do not charge the battery or the radio if it is damp. Dry it before charging to avoid damage.

2. BATTERY INFORMATION


WARNING:

» When keys, ornamental chain or other electric metals contact the battery terminal, the battery may become damage or injure a human. If the battery terminals are short circuited it will generate a lot of heat. Take care when carrying and using the battery. Remember to put the battery or radio into an insulated container. Do not put it into a metal container.

2.4 How to Charge

The radio uses a USB-C cable for charging, the USB-C cable can be inserted into the USB-C port on radio for directly charging to the battery. The USB-C cable can also be inserted into the USB-C port on desktop charger. The standard 5V/2A USB-C adapter is used, it is common adapter on the market.

- a. Plug the AC adaptor into the AC outlet, and then plug the cable into the USB-C port located on the back of the charger. The indicator lights green and is then ready to charge a battery.
- b. Plug the battery or the radio into the charger. Make sure the battery terminals are good in contact with charging terminals. The indicator light turns to red--- charging begins.
- c. It takes approximately 2.5 hours for QB-56L thin battery to be fully charged, and 3.5hours for QB-56HL thick battery to be fully charged. When the lamp lights green, the charging is completed. Remove the battery or the radio unit with its battery from socket

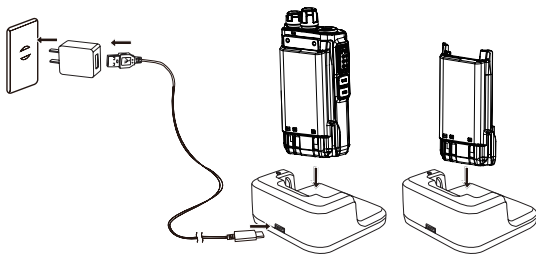

2. BATTERY INFORMATION



NOTE

» when charging a radio (with battery) the indicating lamp will not turn into green to show the fully charged status if the radio is powered on. Only when the radio is switched off will the lamp indicate normal operation. The radio consumes energy when it is power-on, and the charger cannot detect the correct battery voltage when the battery has been fully charged. So the charger will charge the battery in constant voltage mode and fail to indicate correctly when the battery has been fully charged.

d. LED Indicator:

STATUS	LED
Waiting(No Battery)	None
Precharge	Green Light
Charging	Red Light
Fully Charged	Green Light



NOTE

» **Trouble means battery too warm, battery short-circuited or charger short-circuited.**

2.5 How to Store the Battery

- a. If the battery needs to be stored, keep it in status of 80% discharged.
- b. It should be kept in low temperature and dry environment.
- c. Keep it away from hot places and direct sunlight.




NOTE

- » **Do not short circuit the battery terminals.**
- » **Never attempt to remove the casing from the battery pack.**
- » **Never store the battery in unsafe surroundings, as a short may cause an explosion.**
- » **Do not put the battery in a hot environment or throw it into a fire, as it may cause an explosion.**

3. PREPARATION


3.1 Installing / Removing the Battery

- a. Match the two top grooves of the battery pack with the corresponding guides on the back of the radio and then push it.
- b. To remove the battery pack, slide the release latch at the bottom away the battery and remove the pack from the transceiver.

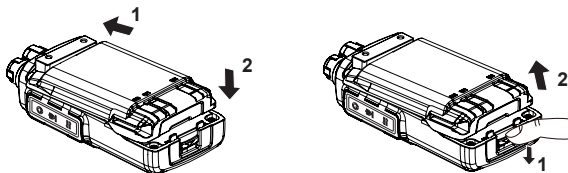

3.2 Installing / Removing the Antenna


- a. Installing the Antenna: Screw the antenna into the connector on the top of the transceiver by holding the antenna at its base and turning it clockwise until secure.
- b. Removing the Antenna: Turn the antenna counter-clockwise to remove it.

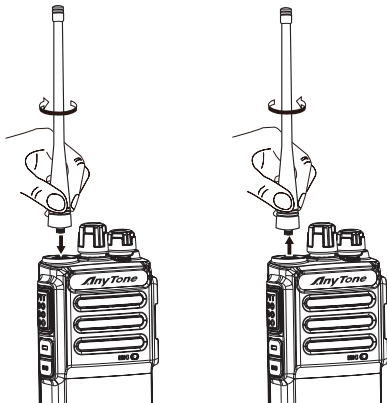

3. PREPARATION


3.3 Installing / Removing the Belt Clip

- a. Installing the Belt Clip: Place the belt clip above the corresponding holes on the back of the radio, and screw it into place clockwise with the two supplied screws.
- b. Removing the Belt Clip: Unscrew counter-clockwise to remove the belt clip.

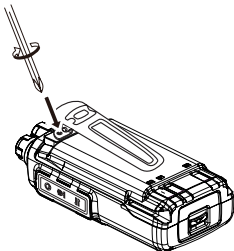


3.4 Installing the Additional Speaker/Microphone (Optional)

Pry open the rubber MIC-Headset jack cover and then insert the Speaker / Microphone plug into the double jack.

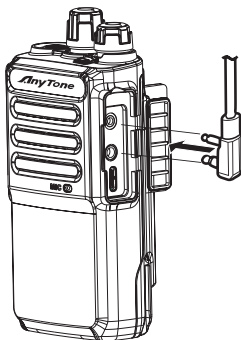

4. RADIO OVERVIEW

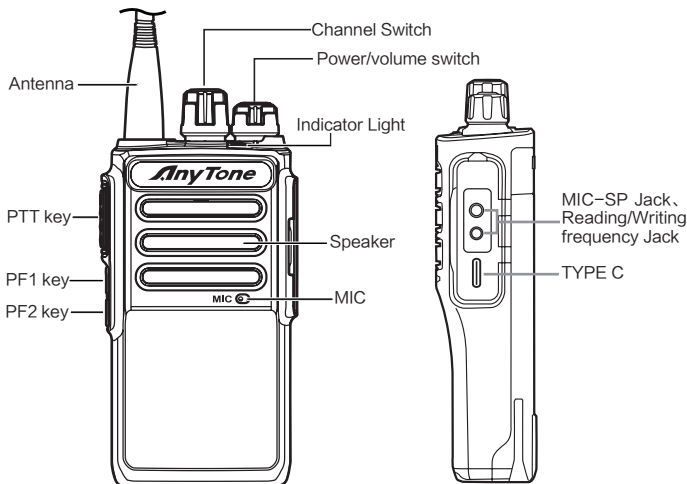

4.1 Status Indications

The top LED will help you to identify the current radio status.

LED Indication	Status
Flashes Red	Low battery voltage
Constant Red	Transmitting
Constant Green	Analog Receiving
Constant Cyan	Digital Receiving
Flashes Green	Scan
Constant Purple	Save the programming data into radio
Constant Orange	Power on indication

5. BASIC OPERATIONS

5.1 Power on the Radio

Turn on the radio by turning the [Power/Volume] switch clockwise till a click is heard, and the LCD displays will show a start-up message, and you will hear a beep after 7 seconds.

5.2 Adjust Volume

Rotate the [Power/Volume] knob to adjust the volume. Turn clockwise to increase the volume and counterclockwise to decrease the volume. The LCD display will show the volume status during an adjustment.

5.3 Select a Zone

Assign a key to Zone Switch function in CPS, press the key to select the zone.

5.4 Select a Channel

Turn the channel switch to select a channel.

5.5 Receiving and Responding to a Radio Call

When the radio is in the digital mode, it can receive and respond to a call with the same frequency/color code/ slot. When receiving a call:

- a. If the radio is programmed with Call Alert in CPS-Optional Setting-Alert Tone, when receiving a call, the radio will ring briefly.
- b. The blue LED lights up.
- c. When the call is ended, you can press [PTT] to respond the call.

5.6 Making a Call

Turn the channel switch to choose a programmed channel.

Hold the radio vertical 2.5-5cm from your mouth, press the [PTT] key to start the call, the red LED lights up, if the radio is programmed with "talk permit", the radio will ring briefly, later you can start the talk.

Release [PTT] key to receive the reply.

5.7 Monitor

In standby, press the [PF2] key to enter Monitor. When receiving matched carrier but the signaling / ID is unmatched or the signal is too weak, this function allows monitor the weak signal and signal with unmatched ID.

Press the [PF2] key again to shut off speaker and return to standby.

 » **When in analog mode, if no signal, it will emit noise when press the Monitor Key.**

5. BASIC OPERATIONS

5.8 Battery Voltage Test

Press the key programed as Voltage function to check the current battery voltage, press this key again to return.

6. PROGRAMMABLE FUNCTIONS

PF1 and PF2 key are programmable in CPS, it allows you assign the key as short, Long1 or Long2 function.

1)Short : Press the programmed key to activate the assigned function.

2)Long 1: Hold pressing the programmed key until the radio emits “Du” beep, release the key to activate the assigned function

3)Long 2: Hold pressing the programmed key, do not release the key even when the radio emits “Du” beep, the radio will activate the assigned function.

Please refer to below assigned functions for the programmable key.

(1) Voltage

Check the current battery capacity voltage.

(2) Power Switch

Switch the power between super high, high, middle and low power.

(3) Repeater

Switch between Talk Around and Repeater mode. Talk around function will make the radio disconnect with repeater, two radios can communicate directly without repeater.

(4) Reverse

Turn on/off the frequency reverse function. Reverse function is only valid in analog channel, the RX/TX frequency and CTCSS/DCS encode/decode will exchange when turn on Reverse function.

(5) Digital Encryption

Press the programmed key, radio will pronounce with turn on the Digital Encryption or the digital encryption group. Repeat press the key to choose the digital encryption group or turn off the function.

This function is only valid in repeater channel, the TX and RX radio must use same encrype code.

(6) Ana Call

In Analog mode, press the programmed key to send the DTMF/5TONE/2TONE encode. This function is only valid for analog channel.

(7) VOX Level

Set up the VOX level, radio will pronounce the vox level.

VOX function will allow the user start the TX by voice instead of pressing PTT.

6. PROGRAMMABLE FUNCTIONS

(8) Scan

Press the programmed key to start or stop the scanning.

(9) Emergency Alarm

Press the programmed key to start or exit the emergency alarm.
Emergency alarm should be set up in CPS-Public-Alarm Setting first.

(10) Monitor

Monitor the weak signal or the signal with unmatched ID.
If you use this function in analog channel, the radio will emit the background noise.

(11) SQ Cancel

Press the programmed key to ignore the squelch mode setting for analog channel, the radio only check the carrier, it doesn't check the CTCSS/DCS and signaling.
Squelch mode is set in CPS-Channel-Squelch mode.

(12) Work Alone

Turn on/off the work alone function. When work alone function is turned on, the radio will start alarm when the response time is reached. Press any key or voice transmit will shut off the alarm.
Work Alone function should be set in CPS-Public-Alarm setting first.

(13) Next Zone/ Prev Zone

Press the programmed key to switch the zone.
Maximum 16zones, each zone with maximum 16channels.

(14) Mic Level

Allow to switch the microphone gain level, total 5levels for optional.

(15) Mic Quality

Allow to adjust the sound to high pitch or low pitch, the RX radio will hear better sound.
This function is only valid in digital channel.

(16) Repeater Check

Press the programmed "repeater check" key to turn on/off the function.
Turn on this function will allow the radio to check the repeater status, it will broadcast "Repeater is out of range" if the repeater is not in range.

(17) Roaming

In standby, press the key programmed as "Roaming" to search and lock on the repeater with strongest signal. (Note: After lock on a repeater, the radio

6. PROGRAMMABLE FUNCTIONS

will return to last frequency only after channel or frequency is changed. The repeater frequency list must pre- programmed in CPS.)

(18) Key Lock

Press the programmed key to lock or unlock the side keys.

(19) ANA-DIG Switch

When the radio is on a digital or analog channel, press the programmed ANA-DIG button to switch the channel between digital and analog mode.

Notice: Mixed Analog or Mixed Digital channel can not be switched. Only the pure analog or digital channel can be switched.

7. RESET

- a.** Power off the radio first.
- b.** Then power it on while holding the [PTT] and the [PF1] button below the PTT at the same time.
- c.** Release the keys until the indicator lights blue color.
- d.** The reset is done when radio finish reboot.

8. TROUBLE SHOOTING GUIDE

Problems	Solutions
The radio cannot be switched on or no display after being switched on.	A. Battery pack may not be installed properly. Remove the battery pack and install it again. B. Battery power may be insufficient. Recharge or replace the battery pack.
The battery doesn't last very long after charging.	The battery is defective; please replace it with a new battery pack.
Cannot talk to or hear other members in your group.	1. Make sure the frequency and CTCSS are the same as other members. 2. Make sure you are within range, and not too far away from your member. 3. Make sure you are set in correct digital mode, and frequency. 4. In digital mode, make sure set correct code and encrypt group is used in current channel. 5. In digital mode, make sure set correct receiving contacts and receiving group is used.
Other voices from non-group members are heard on the channel.	Analog: Change the CTCSS/DCS Tone, and make sure to change the tone on all radios in your group.

9. ON-LINE SERVICE AND SUPPORT

Warning Notes

Every effort has been made to ensure that the information in this document is complete, accurate, and up to-date. Our Radio assumes no responsibility for the results of errors beyond its control. The manufacturer of this equipment also cannot guarantee that changes in the equipment made by non-authorized users will not affect the information in it.

FCC Licensing Information

This radio operates on Commercial / Land Mobile frequencies which require a license from the Federal Communications Commission (FCC) for business, personal, education and recreational use. To obtain forms, call the FCC forms hotline at: 1-800-418-3676 or go to <http://www.fcc.gov>
For questions concerning commercial licensing, contact the FCC at 1-888-CALL-FCC (1-888-225-5322).

SAFETY

The AT-D168 DMR handheld transceiver has been carefully designed to provide you with years of safe, reliable operation. As with all electrical equipment, however, there are a few basic precautions you should take to avoid hurting yourself or damaging the radio:

- Read the instructions in this handbook carefully. Be sure to save it for future reference.
- Read and follow all warning and instruction labels on the radio and owner's manual.
- Do not carry the transceiver by the antenna. This may damage the antenna or antenna terminal. Grasp the handheld by its base (not the antenna) when you need to place or remove it.
- Do not keep the radio with the antenna very close to, or touching exposed parts of the body, while transmitting. Our radios will perform best, if you speak 2-4 inches away from the microphone and the radio is vertical.
- Be sure the "PTT" key is not pressed when you do not need to transmit.
- Do not operate the radio near unshielded electrical blasting caps or in an explosive atmosphere.
- Do not transmit without the antenna fitted on the radio. Though it is provided with a protection, it may damage the TX output final stage.
- Respect the environment conditions. The radio is designed to be used in heavy environments, however avoid exposing it to extremely hot or cold temperature (out of the range between -20°C to $+55^{\circ}\text{C}$). Do not expose the transceiver to excessive vibrations as well as dusty or rainy locations.
- Never try to disassemble or service the radio by yourself (aside from the routine maintenance described in this handbook). It may cause damage to the radio transceiver and void your warranty requiring extensive repair work. Always contact your local dealer for assistance.
- Use only authorized accessories. Using non our radio brand accessories may seriously damage your handheld transceiver and void your warranty.
- Do not spill liquid of any kind into your radio. If the transceiver gets wet, immediately dry it by a soft and clean cloth.
- Switch the radio off before you clean it. Follow the directions described in the paragraph "Care and maintenance".
- Handle the battery properly. Never place the LI-ion battery in your pocket

SAFETY

or purse with loose coins. This could result in short circuiting the battery.

- Be certain that your power source matches the rating listed for the supplied battery charger (AC adapter). If you are not sure, check with your authorized dealer.
- Avoid damaging the power cable of the battery charger. Do not step on or place anything on it as this could result in a damaged charger power cord. This product complies with the requirements of the Council Directives 89/336/EEC and 73/23/EEC on the approximation of the laws of the member states relating to electromagnetic compatibility and low voltage.

WARNING

Your wireless hand-held portable transceiver contains a low power transmitter. When the Push-to-Talk (PTT) button is pressed it sends out radio frequency (RF) signals. The device is authorized to operate at a duty factor not to exceed 50% TX and 50% RX.

In August 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless devices. To maintain compliance with the FCC's RF exposure guidelines, this transmitter and its antenna must maintain a separation distance of least 2 inches from your face. Speak in a normal voice, with the antenna pointed up and away from the face at the required separation distance. The belt clip is for storage purposes only.

AVOID TRANSMITTING ON HIGH POWER WHILE RADIO IS ATTACHED TO YOUR BELT. To transmit, hold the device away from your body and ensure the antenna is at least 2 inches from your body when transmitting.

10. TECHNICAL SPECIFICATIONS

General		
Frequency Range	136-174MHz (VHF) or 400-480MHz (UHF) (Single band only)	
Channel Capacity	256 channels	
Channel Spacing	25KHz (Wide Band) , 12.5KHz (Narrow Band)	
Phase-locked Step	5KHz, 6.25KHz	
Operating Voltage	7.4V DC ±20%	
Frequency Stability	±1.5ppm	
Operating Temperature	-20℃ ~ +55℃	
Size	59×36×118mm (with battery pack)	
Weight	204g (with battery pack)	
Receiving Part		
	Wide band	Narrow band
Sensitivity(12dB SINAD)	≤0.25μV	≤0.35μV
Digital Sensitivity	0.3uV/-117.4dBm (BER 5%) 0.7uV/-110dBm (BER 1%)	
Adjacent Channel Selectivity	≥65dB	≥60dB
Spurious Emission	≤-57dB	≤-57dB
Spurious Rejection	≥65dB	≥60dB
Blocking	84db	
Hum & Noise	≥45dB	≥40dB
Audio Distortion	≤5%	
Audio Power Output	1000mW/16Ω	
Transmitting Part		
	Wide band	Narrow band
Power Output	VHF: 5/2.5/0.5W; UHF:4.5/2.5/0.5W	
Modulation	±5.0KHz@25KHz	±2.5KHz@12.5KHz
Adjacent Channel Power	≥70dB	≥60dB
Hum & Noise	≥40dB	≥36dB
Spurious Emission	≤-60dBc	≤-60dBc
4FSK Digital Modulation	12.5KHz (data) 7K60FXD 12.5KHz (data+voice) 7K60FXE	
Audio Distortion	≤5%	
Error rate	≤3%	

Disposal of your Electronic and Electric Equipment

Products with the symbol (crossed-out wheeled bin) cannot be disposed as household waste. Electronic and Electric Equipment should be recycled at a facility capable of handling these items and their waste by products.

In EU countries, please contact your local equipment supplier representative or service center for information about the waste collection system in your country.



FCC WARNING STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference including received interference that may cause undesired operation.

The grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

Replacement of any transmitter component (crystal, semiconductor, etc.) not authorized by the FCC equipment authorization for this radio could violate FCC rules.

WARNING: MODIFICATION OF THIS DEVICE TO RECEIVE CELLULAR RADIOTELEPHONE SERVICE SIGNALS IS PROHIBITED UNDER FCC RULES AND FEDERAL LAW.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF Exposure Statement

This device generates RF electromagnetic energy during transmit mode. This radio is designed for and classified as "Occupational Use Only" meaning it must be used only during the course of employment by individuals aware of the hazards and the ways to Minimize Such hazards.

This radio is NOT intended for use by the "General Population" in an uncontrolled environment. This radio has been tested and complies with the FCC RF exposure limits for "Occupational Use Only" .

In addition, This device complies with the following Standards and Guidelines with regard to RF energy and electromagnetic energy levels and evaluation of such levels for exposure to humans:

-IEEE Std. 1528:2013 and KDB447498, Evaluating Compliance with FCC Guidelines for Human Exposure to Radio Frequency Electromagnetic Fields.

-American National Standards Institute (C95.1-1992), IEEE Standard for Safety Levels with Respect to Human Exposure to Radio Frequency Electromagnetic Fields 3 kHz to 300 GHz.

-American National Standards Institute (C95.3-1992), IEEE Recommended Practice for the Measurement of Potentially Hazardous Electromagnetic Fields-RF and Microwave.

The information listed above provides the user with the information needed to make him or her aware of RF exposure and what to do to as-sure that this radio operates with the FCC RF exposure limits of this radio.

Electromagnetic Interference/Compatibility

During transmissions, the radio generates RF energy that can possibly cause interference with other devices or systems. To avoid such interference, turn off the radio in areas where signs are posted to do so.

DO NOT operate the transmitter in areas that are sensitive to electromagnetic radiation such as hospitals, aircraft and blasting sites.

Occupational/Controlled Use

The radio transmitter is used in situations in which persons are exposed as consequence of their employment provided those persons are fully aware of the potential for exposure and can exercise control over their exposure.

CE SAFETY STATEMENT INFORMATION

Hereby, we declare that the radio is compliance with Radio equipment Directive (RED) 2014/53/EU. The device in the environment with the temperature between 0-40°C and operating under 2000m, otherwise, it may damage your radio.

For this device, Head SAR and Body SAR was performed with the device configured in the positions according to EN 50566:2023 & EN IEC/IEEE 62209-1528:2021, and face-up SAR was performed with the device 25mm from the phantom, and Body SAR was performed with the device 0mm from the phantom. Body SAR was also performed with the headset and belt clip attached and without.

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

EU Declaration of Conformity

We, hereby declare that the essential requirements set out in the **RED Directive 2014/53/EU**, have been fully fulfilled on our product with indication as below:

Product Name Digital DMR and Analog Radio
Brand Name / Model AnyTone / AT-D168, AT-D168II, AT-D168A, AT-D168B,
AT-D169, AT-D169II

The following standards have been applied for the investigation of compliance:

☒ Safety	EN IEC 62368-1: 2020+A11:2020
☒ Health	EN 50566:2017/A1:2023 EN IEC/IEEE 62209-1528:2021
☒ EMC	ETSI EN 301 489-1 V2.2.3 (2019-11) ETSI EN 301 489-5 V2.2.1 (2019-04)
☒ Radio	ETSI EN 300 113 V3.1.1 (2020-06)
	ETSI EN 300 086 V2.1.2 (2016-08)
	ETSI EN 300 219 V2.1.1 (2016-08)

The conformity assessment procedure referred to in Article 17 and detailed in Annex III of Directive 2014/53/EU has been followed with the involvement of the following Notified Body:

2280 MiCOM Labs Inc.

and issued the EU-type examination certificate.

Furthermore, the ISO requirement for the in-process quality control procedure as well as the manufacturing process has been reached. The technical document as well as the test reports will be kept for a period at least 10 years after the last product has been manufactured at the disposal of the relevant national authorities of any Member State for inspection.

Detail contact information for this declaration has been listed below as the window of any issues relevant for this declaration.

Manufacturer Information:

Company Qixiang Electron Science & Technology Co., Ltd.
Address Qixiang Building, Tangxi Industrial Zone, Luojiang, Quanzhou, Fujian,
362011 China
Name/Title Ken Xu E-mail Ken6833@qxdz.cn
Tel. No. 86-0595-22656926 Fax No.



Signature / stamp Date: Aug. 21, 2024